




JUSTFENCE

The Experts in Property Fencing

Step 1: Tie a rope around the center of boundary stones and mark the positions of fencing stones

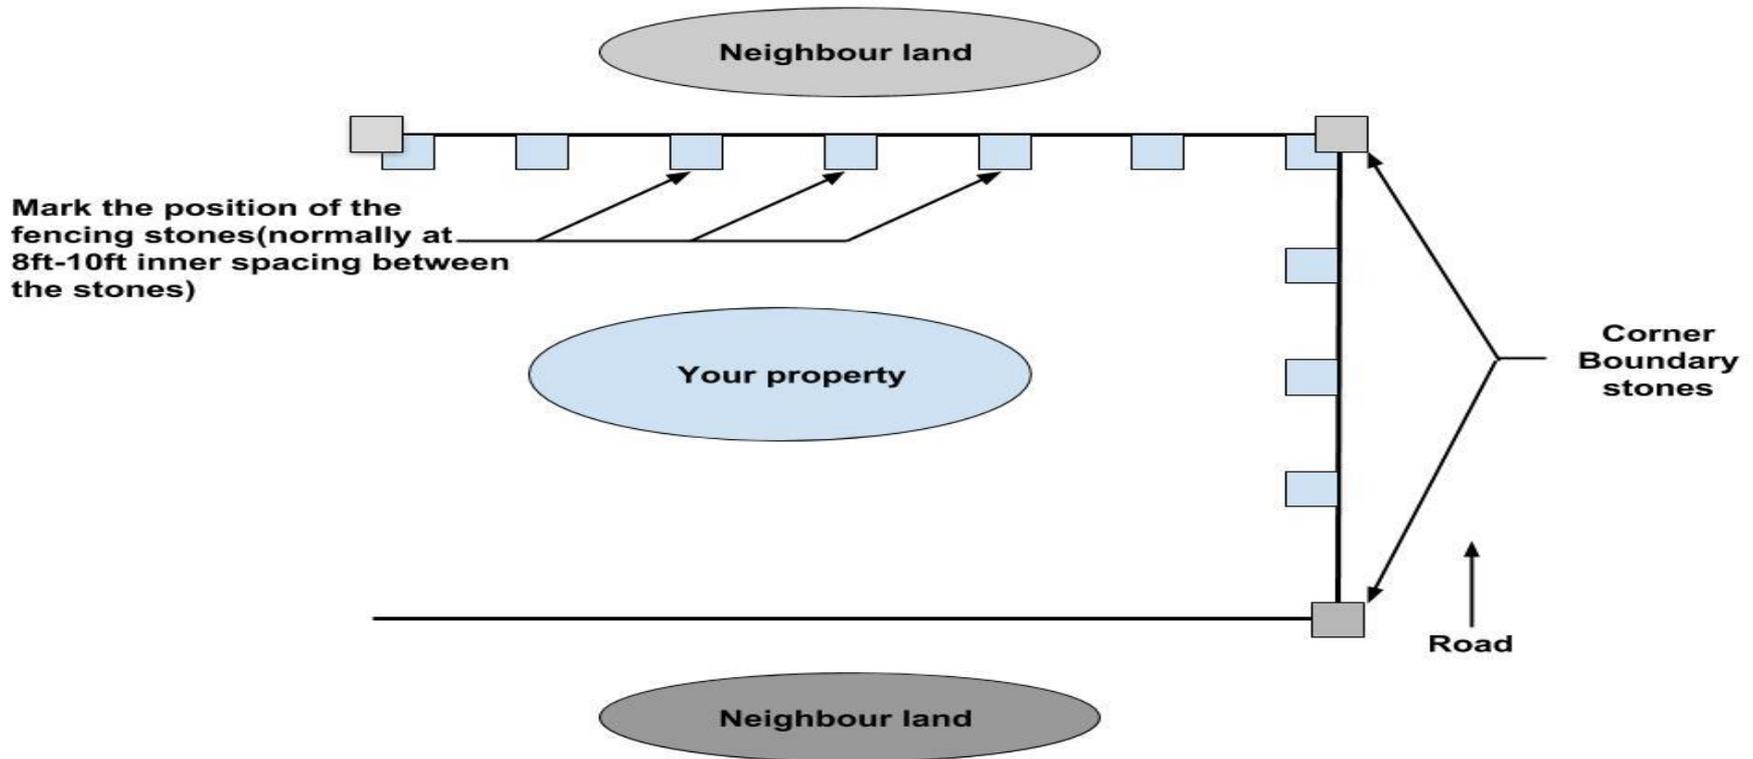




JUSTFENCE

The Experts in Property Fencing

Step 2: Excavate the land for required depth to place fencing stones (min 2ft) and keep the excavated soil aside.

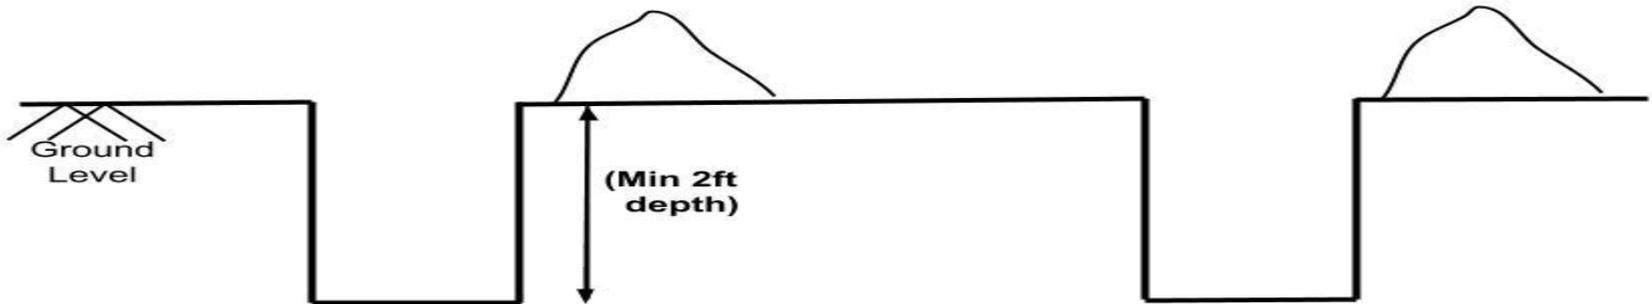


Note: Excavation should be done along the marked alignment line and rope should be checked for straight line during excavation



JUSTFENCE

The Experts in Property Fencing

Step 3: Make sure that the excavated pit must be bigger than the size of fencing stone for adjustments while placing

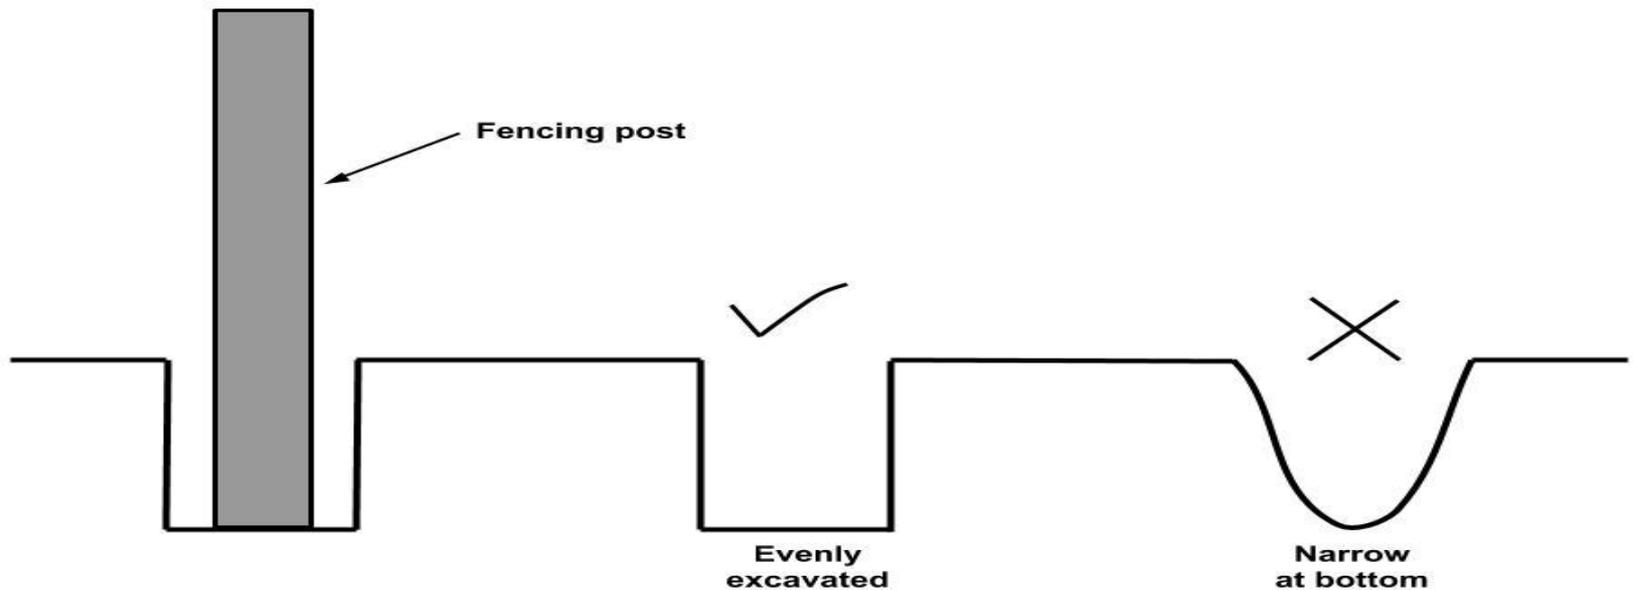




JUSTFENCE

The Experts in Property Fencing

Step 4: First Place the Corner post and tie alignment rope at the top and bottom for adjusting the intermediate posts.

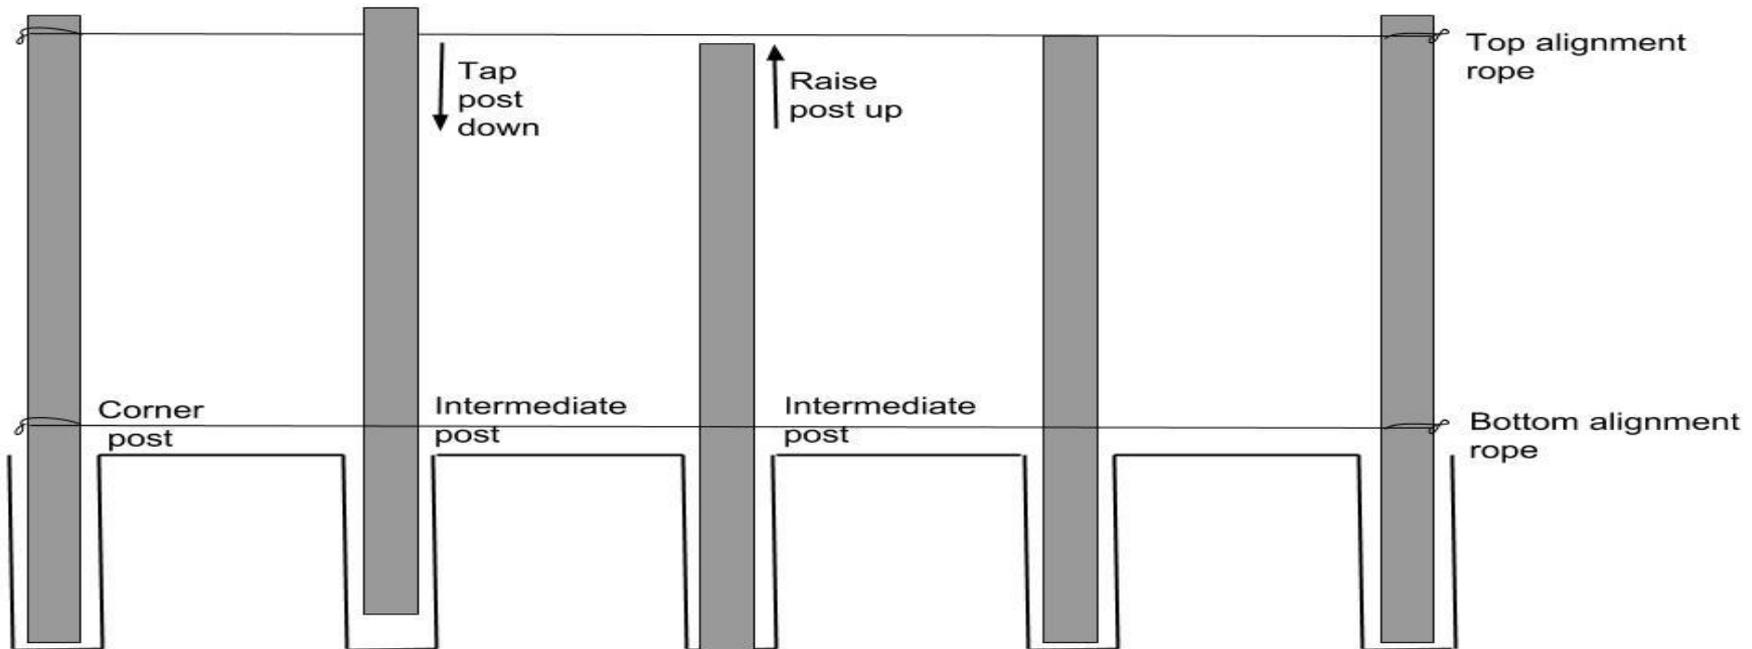




JUSTFENCE

The Experts in Property Fencing

Step 5: Place Support posts in corner and at required intermediate posts.

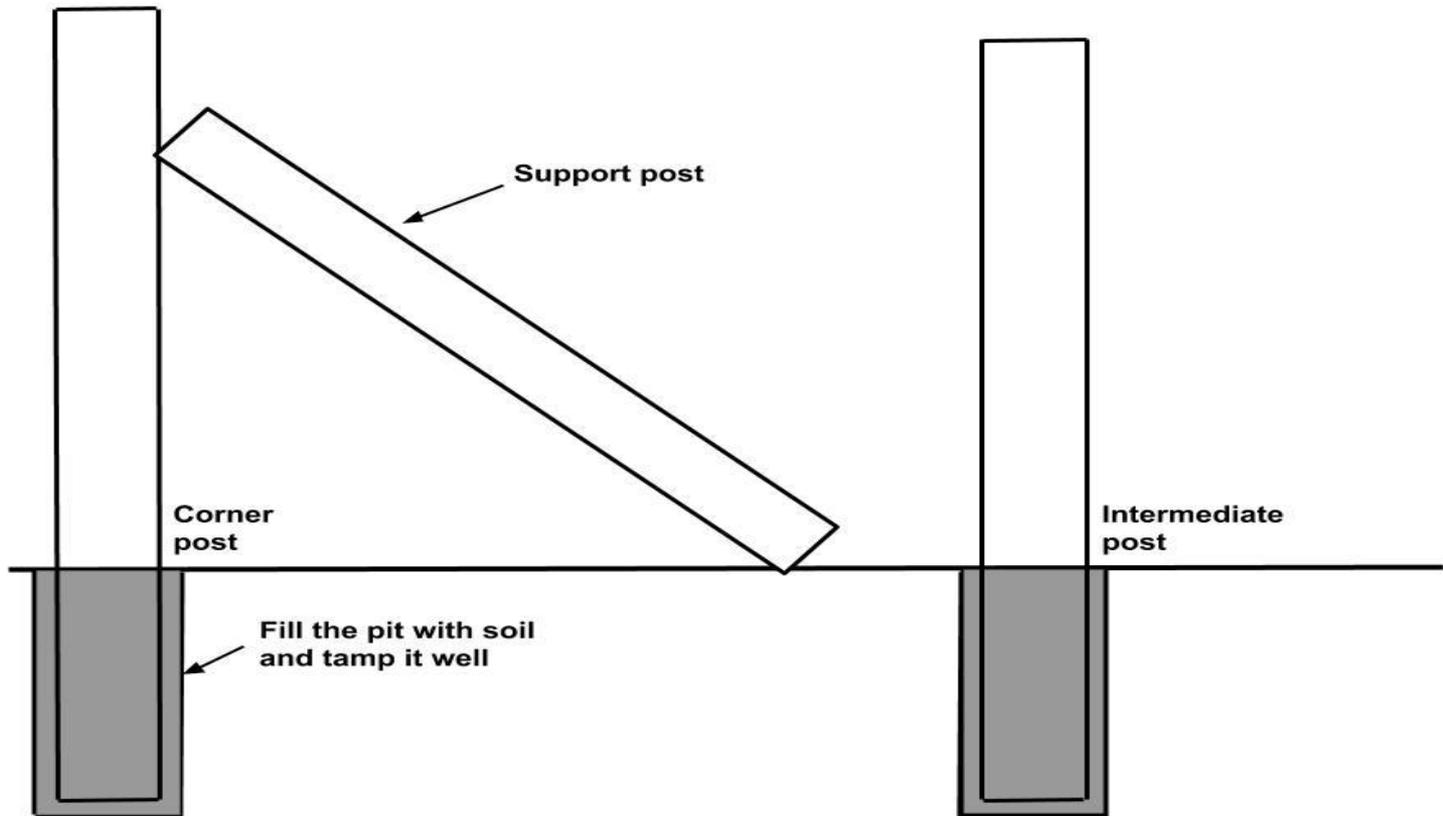




JUSTFENCE

The Experts in Property Fencing

Step 6: Tie one end of the barbed wire to the corner post and the other end to the tightening machine.

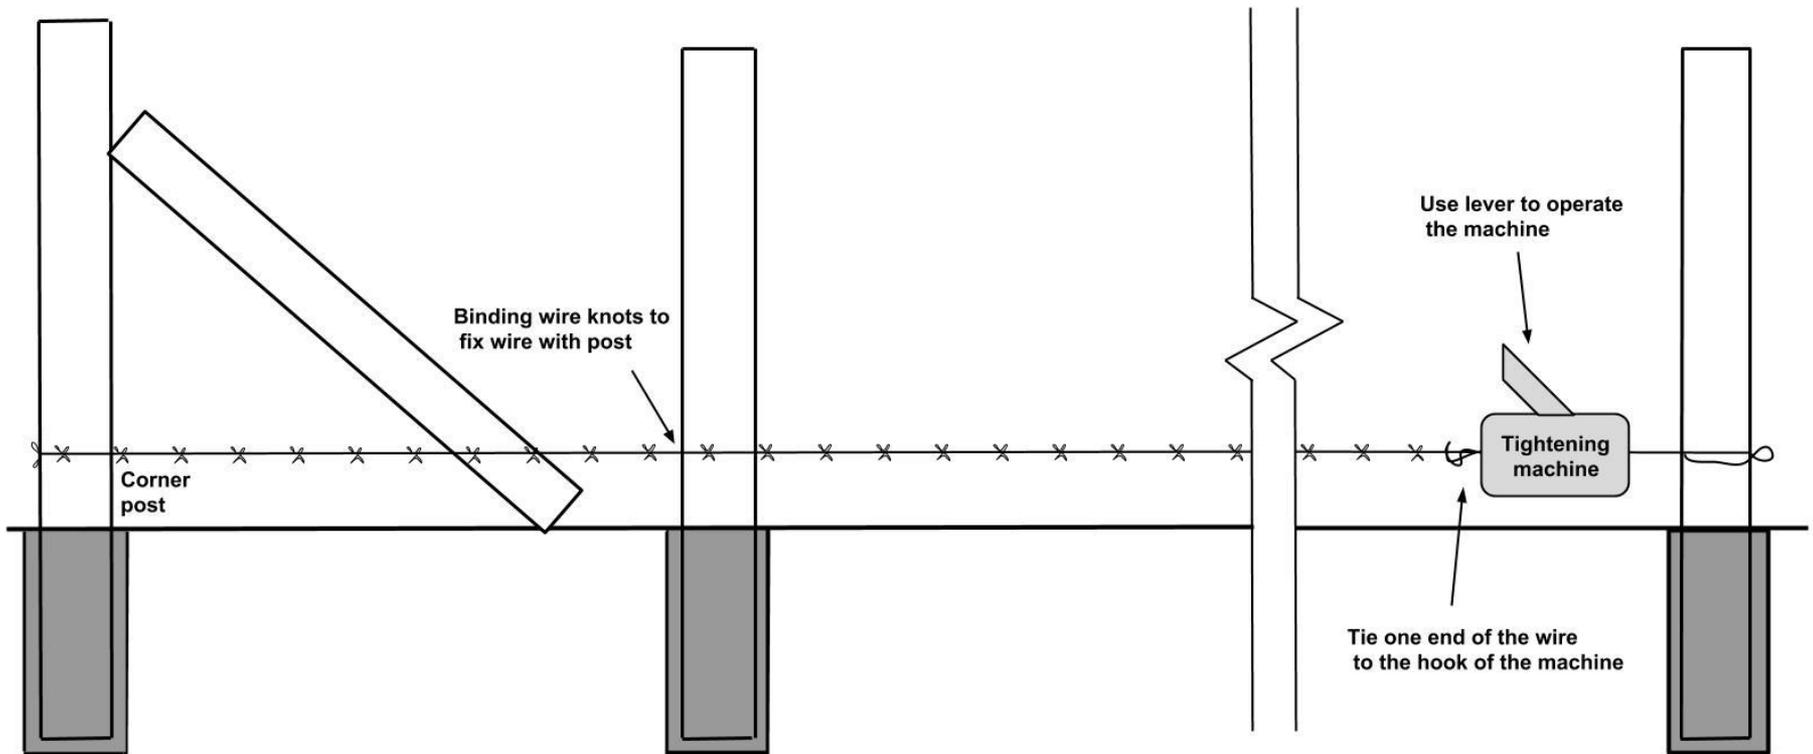




JUSTFENCE

The Experts in Property Fencing

Step 7: Cut the barbed wire to required height and straighten them for better look

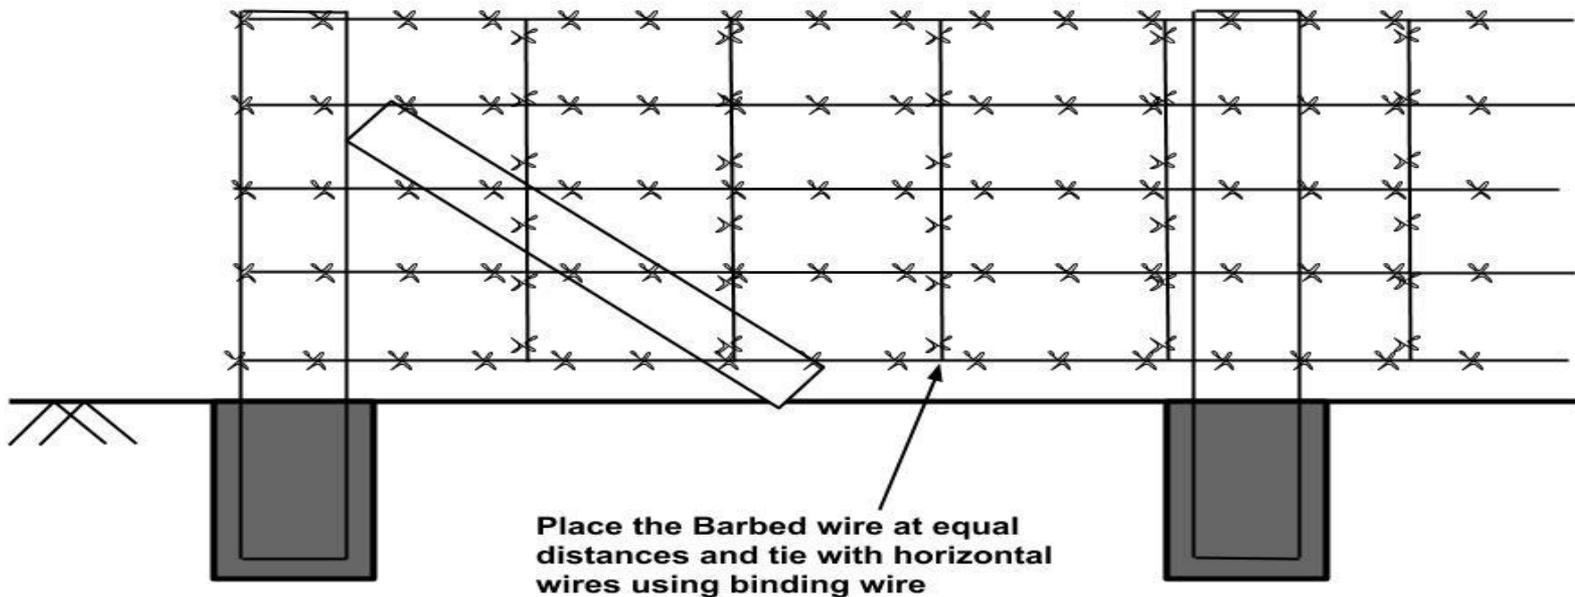





JUSTFENCE

The Experts in Property Fencing

Different Methods of Barber Wire Fencing

4 lines

5 lines

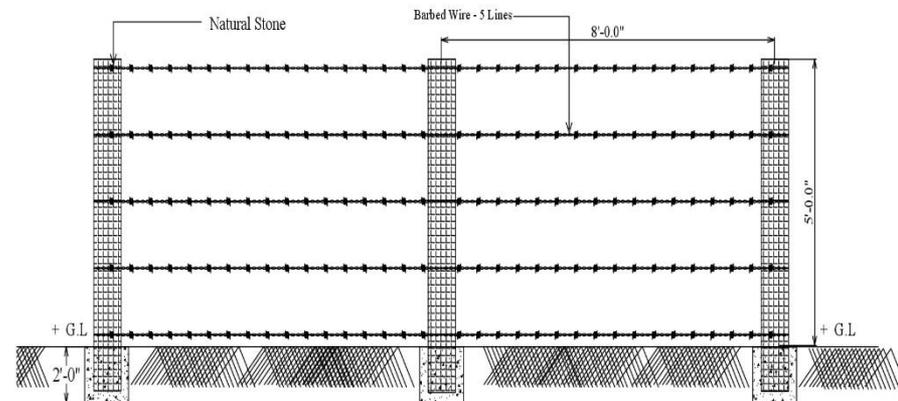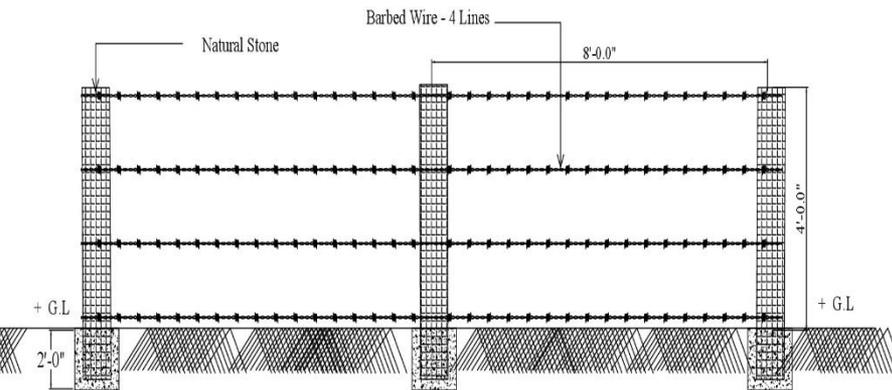





JUSTFENCE

The Experts in Property Fencing

5+2 lines

6+2 lines

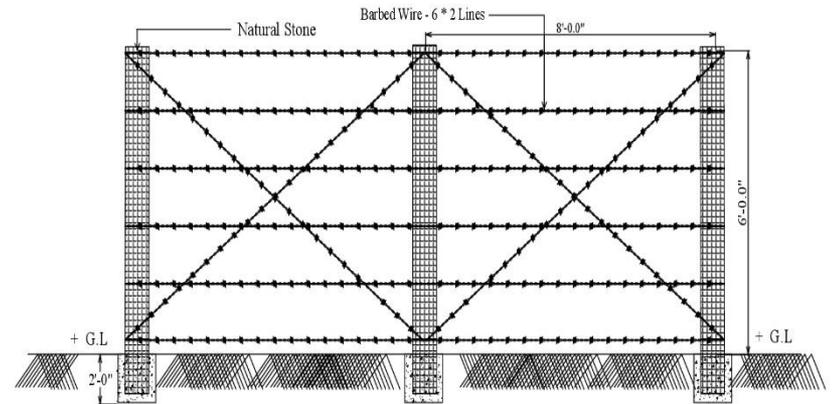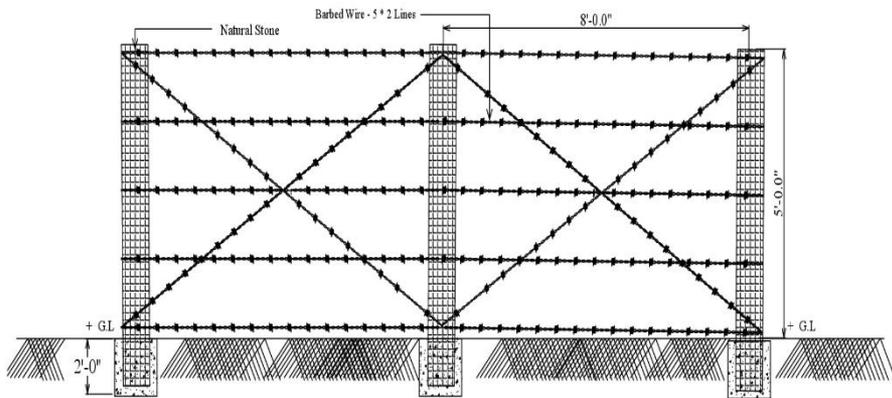



JUSTFENCE

The Experts in Property Fencing

6+6 lines

7+7 lines

